 




invento
just play

Konformitätserklärung


Hiermit erklärt die Invento Products & Services GmbH, dass sich dieses Modell (Art. Nr. 500816 = 777-216), einschließlich Controller in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 2014/53/EU befindet. Die Konformitätserklärung kann unter folgender Adresse gefunden werden: www.inventodownload.com/conformity.

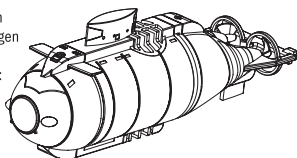

Gebrauchsanleitung

Bitte lesen Sie die Gebrauchsanleitung vor dem erstmaligen Betrieb aufmerksam durch. Gebrauchsanleitung bitte sorgfältig aufbewahren.

Inhalt

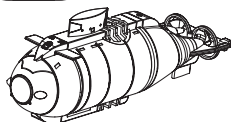


3-Kanal U-Boot: 1 x



Sender:
1 x




Antenne: 1x

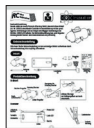



Gebrauchsanleitung:
1x

Produktbeschreibung

U-Boot

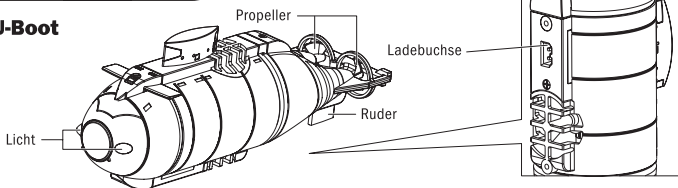

Sender

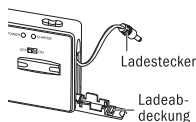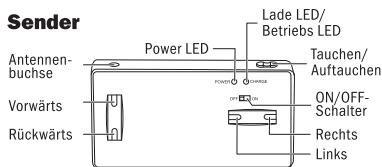

Vorbereitung

1. Drücken Sie den Verschluss in die angegebene Richtung und entnehmen Sie den Sender (Abb. 1)

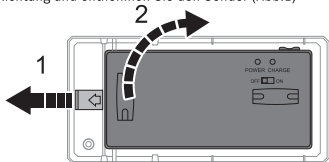


Abb. 1

2. Öffnen Sie den Deckel und entnehmen Sie die Antenne (Abb. 2)

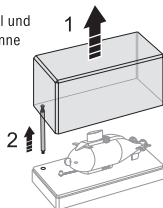


Abb. 2

3. Lösen Sie die Schrauben an der Unterseite der U-Boot-Halterung (Abb. 3)

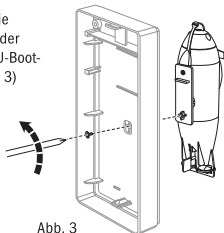


Abb. 3

4. Drehen Sie die Befestigungsschrauben gegen den Uhrzeigersinn (Abb. 4)

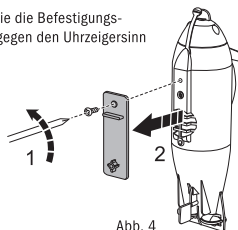


Abb. 4

5. Schrauben Sie die Antenne in die vorgesehene Buchse am Sender (Abb. 5)

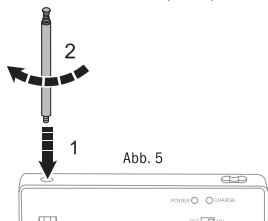


Abb. 5

6. Öffnen Sie das Batteriefach mit einem Kreuzschlitz-Schraubendreher und legen Sie 4 x AA Batterien (nicht enthalten) in das Batteriefach ein. Anschließend den Deckel wieder auf das Batteriefach schrauben (Abb. 6).

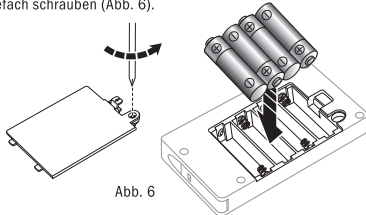


Abb. 6

7. Schalten Sie den Sender ein (ON/OFF-Schalter in ON-Position bringen). Die Power LED leuchtet auf. Beim Drücken einer beliebigen Taste der Fernbedienung leuchtet auch die Betriebs-LED auf (Abb. 7)

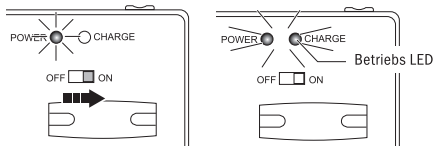


Abb. 7

Laden

1. Öffnen Sie die Ladeabdeckung am Sender und entnehmen Sie das Ladekabel. Stecken Sie den Ladestecker in die Ladebuchse des U-Boots (Abb. 8). Die Lade-LED sollte nun aufleuchten (Abb. 9) und nach ca. 25 Minuten wieder erlöschen. Nach dem Erlöschen der Lade-LED ist das U-Boot aufgeladen. Betriebszeit: Ca. 10 Minuten.
2. Aufladen über das USB-Kabel: Stecken Sie den USB-Stecker in einen freien USB-Port an Ihrem Computer und den Ladestecker in die Ladebuchse des U-Boots (Abb. 10). Die Lade-LED leuchtet auf und erlischt nach dem Ende des Ladevorgangs (ca. 25 Minuten). Betriebszeit: Ca. 10 Minuten.
3. Setzen Sie das U-Boot nun vorsichtig ins Wasser und drücken Sie eine Taste an der Fernbedienung. Wenn sich das U-Boot bewegt, ist die Verbindung hergestellt.

Achtung: Wenn die U-Boot-LED blinkt, dann muss das U-Boot aufgeladen werden (Abb. 11).




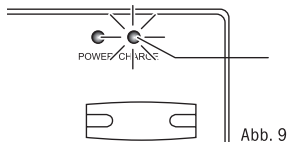


Abb. 10

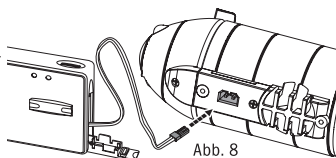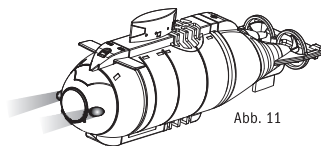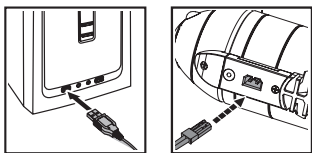

Bedienung

Ziehen Sie die Teleskopantenne auf Maximum aus, um die beste Sendeleistung zu erreichen.

1. Vorwärts-Taste drücken: Das U-Boot fährt vorwärts (Abb. 12).


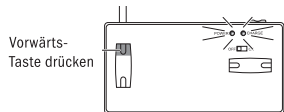


Abb. 12

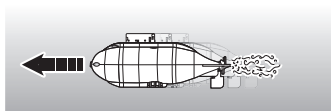

2. Rückwärts-Taste drücken: Das U-Boot fährt rückwärts (Abb. 13).


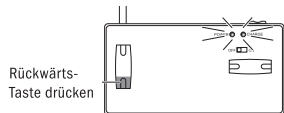


Abb. 13

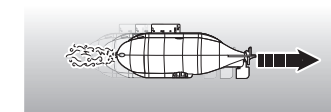


Bedienung

3. Links-Taste drücken: Das U-Boot fährt in eine Linkskurve (Abb. 14).



Abb. 14

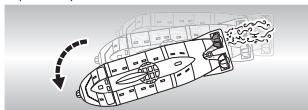

4. Rechts-Taste drücken: Das U-Boot fährt in eine Rechtskurve (Abb. 15).


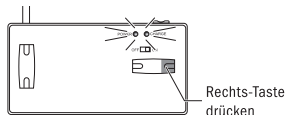


Abb. 15

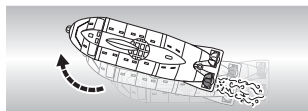

5. Rechte Seite der Tauchen/Auftauchen-Taste drücken: Das U-Boot taucht (Abb. 16).


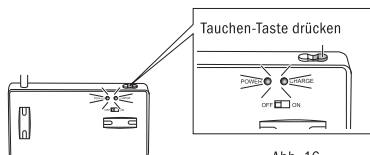


Abb. 16

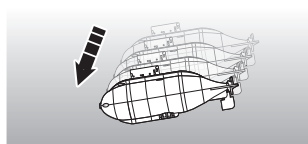

6. Linke Seite der Tauchen/Auftauchen-Taste drücken: Das U-Boot taucht auf (Abb. 17).


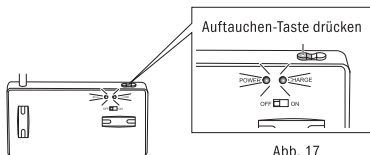


Abb. 17



Nach der Verwendung das U-Boot aus dem Wasser nehmen und mit einem sauberen Tuch abtrocknen.

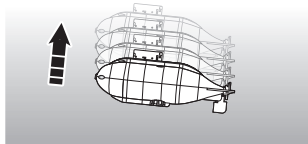

Empfohlenes Zubehör

4 x AA-Batterien 1,5V


ACHTUNG! Nicht für Kinder unter 3 Jahren geeignet, da Kleinteile verschluckt werden können. Erstickungsgefahr!



invento
just play

Declaration of Conformity


Herewith Invento Products & Services GmbH, declares that this model (Art. Nr. 500816 = 777-216) including remote control meets the basic requirements and any other relevant requirements of guideline 2014/53/ EU. The original declaration of conformity can be requested on: www.inventodownload.com/conformity.

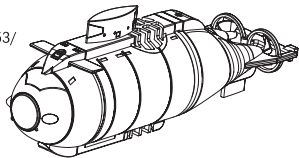

Instruction Manual

Please read the operating instructions carefully before using and keep it in a safe place.

Contents

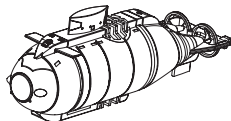

3-Channel-Submarine: 1 x




Charging cable
1x



Transmitter:
1x




Antenna: 1x

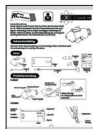



Operating instructions:
1x

Part Details

Submarine

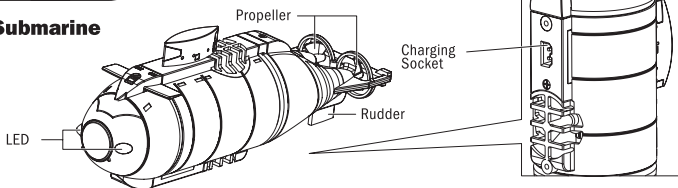

Transmitter

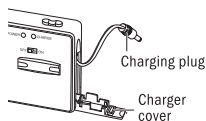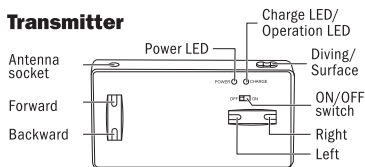

Preparation

1. Push the LOCK towards the direction shown to release the transmitter (fig. 1).

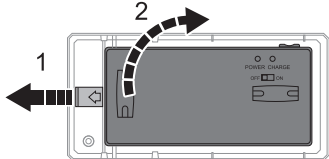


fig. 1

3. Remove the screw on the Mini Boat base as illustrated (fig. 3).

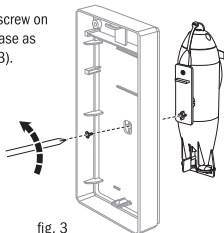


fig. 3

5. Insert and tighten the antenna to the antenna hole on the transmitter as illustrated (fig. 5).

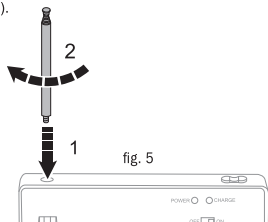


fig. 5

7. Move the ON/OFF switch on the remote controller to ON. The power LED lights up. The operation LED lights up as well when any button on the transmitter is pressed (fig. 7).

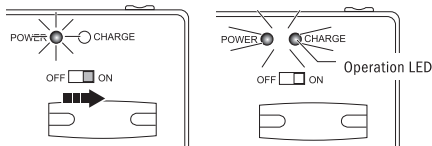


fig. 7

2. Remove the cover and take out the antenna (fig. 2).

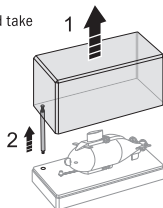


fig. 2

4. Turn the retaining screws anticlockwise (fig. 4).

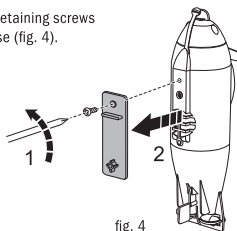


fig. 4

6. Use a Phillips screwdriver to open the battery compartment cover. Insert 4 x AA batteries (not included) with the correct polarity and replace the battery compartment cover (fig. 6).

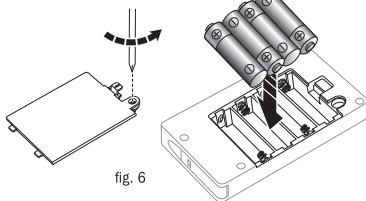


fig. 6

Charging

1. Open the charger cover on the transmitter and take out the charging cable. Insert the charging plug into the charging socket of the submarine (fig. 8). The charging LED lights up to indicate the charging is in process (fig. 9). The charging LED will extinguish after the submarine has been completely charged (charging lasts approximately 25 minutes). Operating time: approx. 10 minutes.

2. Charging by the USB cable: Insert the USB plug into the USB port on your computer and the charging plug into the charging socket on the submarine (fig. 10). The charging LED lights up to indicate the charging is in process. The charging LED will extinguish after the submarine has been completely charged (charging lasts approximately 25 minutes). Operating time: approx. 10 minutes.

3. Place the submarine gently into the water and press any button on the transmitter. The connection is established as soon as the submarine moves.

If the submarine LED is flashing, the submarine has to be charged (fig. 11).

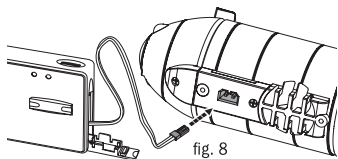


fig. 8

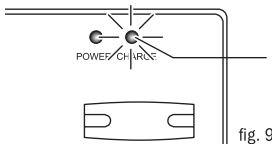


fig. 9

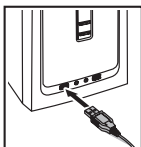


fig. 10

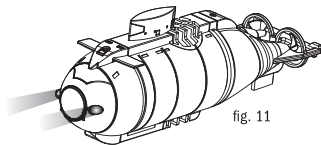
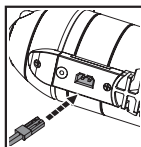


fig. 11

Operation

Extend the transmitter's antenna for better signal reception.

1. Press forward button: The submarine will move forward (fig. 12).


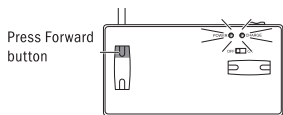


fig. 12

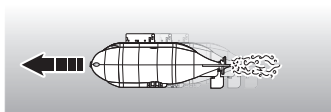

2. Press backward button: The submarine will move backward (fig. 13).


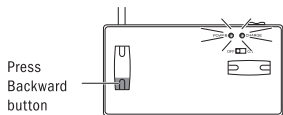


fig. 13

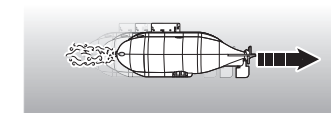

Operation

3. Press left button: The submarine will make left turns (fig. 14).


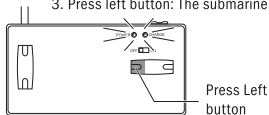


fig. 14

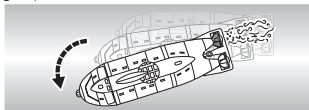

4. Press right button: The submarine will make right turns (fig. 15).


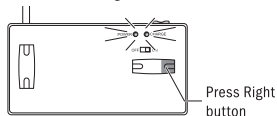


fig. 15

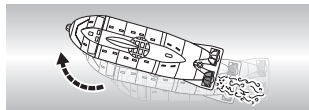

5. Press right side of the Diving/Surface button: The submarine will dive (fig. 16).


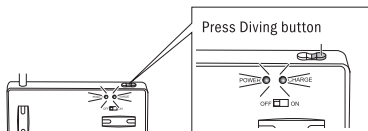


fig. 16

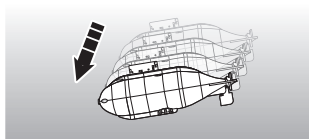

6. Press left side of the Diving/Surface button: The submarine will surface (fig. 17).


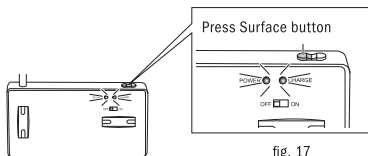


fig. 17



Take the submarine out of the water after use and dry it with a clean cloth.

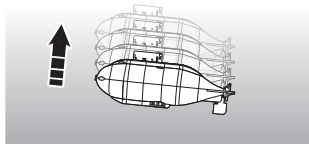

Recommended Accessories

4 x AA 1.5V batteries

WARNING! Not suitable for children under 3 years, because small parts could be swallowed. Choking hazard.