 




**invento**  
just play

### Konformitätserklärung


Hiermit erklärt die Invento Products & Services GmbH, dass sich dieses Modell (Art.No. 500810 = 777-219) einschließlich Controller in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 2014/53/EU befindet. Die Konformitätserklärung kann unter folgender Adresse gefunden werden: [www.inventodownload.com/conformity](http://www.inventodownload.com/conformity)

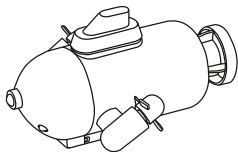

## Gebrauchsanleitung


Bitte lesen Sie die Gebrauchsanleitung vor dem erstmaligen Betrieb aufmerksam durch. Gebrauchsanleitung bitte sorgfältig aufbewahren.

### Inhalt


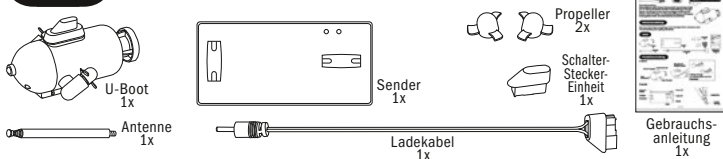


## Produktbeschreibung

### U-Boot


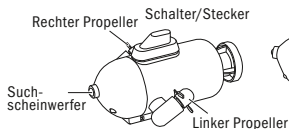


Steckplatz für Schalter/Stecker

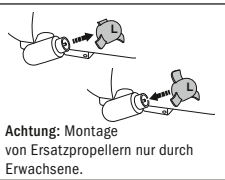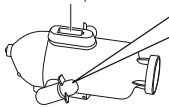

**Achtung:** Montage von Ersatzpropellern nur durch Erwachsene.

### Sender

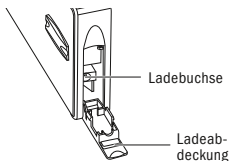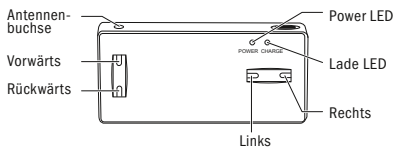

## Vorbereitung

1. Drücken Sie den Verschluss in die angegebene Richtung und entnehmen Sie den Sender (Abb. 1)

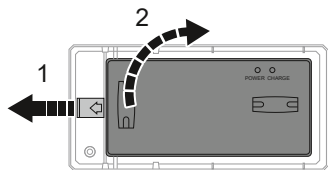


Abb. 1

3. Lösen Sie die Schrauben an der Unterseite der U-Boot-Halterung (Abb. 3)

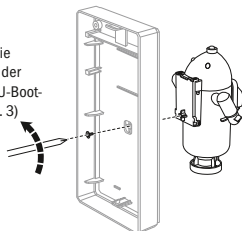


Abb. 3

5. Schrauben Sie die Antenne in die vorgesehene Buchse am Sender (Abb. 5)

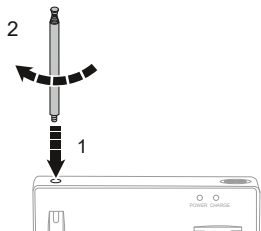


Abb. 5

2. Öffnen Sie den Deckel und entnehmen Sie die Antenne (Abb. 2)

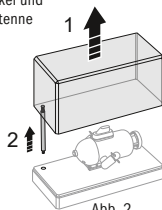


Abb. 2

4. Drehen Sie die 4 Befestigungsschrauben gegen den Uhrzeigersinn (Abb. 4)

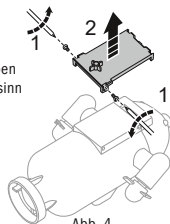


Abb. 4

6. Öffnen Sie das Batteriefach mit einem Kreuzschlitz-Schraubendreher und legen Sie 4 x AA Batterien in das Batteriefach ein. Anschließend den Deckel wieder auf das Batteriefach schrauben (Abb. 6)

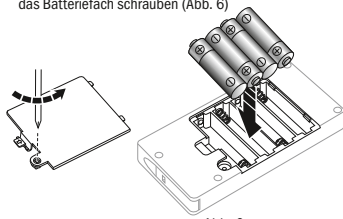


Abb. 6

7. Drücken Sie auf eine der Tasten. Die Power LED leuchtet auf (Abb. 7)

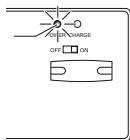


Abb. 7

8. Stecken Sie den Ladestecker in die Ladebuchse des Senders (Abb. 8).  
Entnehmen Sie die Schalter-Stecker-Einheit vom U-Boot und stecken Sie das andere Ende des Ladekabels in den Steckplatz (Abb. 9). Die Lade LED wird aufleuchten (Abb. 10) und nach 10 Minuten wieder erlöschen. Das U-Boot ist nun aufgeladen.

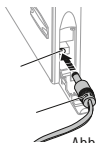


Abb. 8

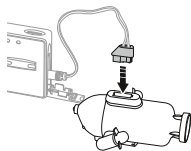


Abb. 9

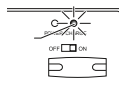


Abb. 10

9. Stecken Sie die Schalter-Stecker-Einheit wieder in den Steckplatz des U-Boots.  
Die Suchscheinwerfer des U-Boots werden nun aufleuchten (Abb. 11)

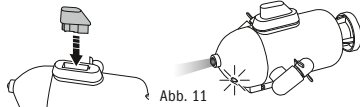


Abb. 11

## Bedienung

Ziehen Sie die Teleskopantenne auf Maximum aus, um die beste Sendeleistung zu erreichen. Anschließend das U-Boot in das Wasser setzen.

1. Vorwärts-Taste drücken: Das U-Boot taucht vorwärts (Abb. 12)

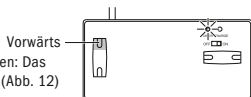


Abb. 12

2. Rückwärts-Taste drücken: Das U-Boot taucht rückwärts (Abb. 13)

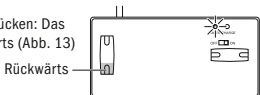


Abb. 13

3. Links-Taste drücken: Das U-Boot fährt eine Links-Kurve (Abb. 14)

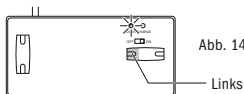


Abb. 14

4. Rechts-Taste drücken: Das U-Boot fährt eine Rechts-Kurve (Abb. 15)





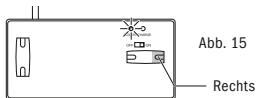


Abb. 15

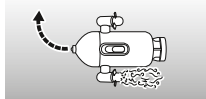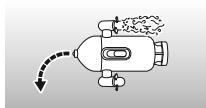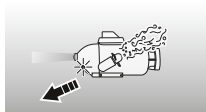


## Wichtige Hinweise

### 1. Richtiges Aufladen

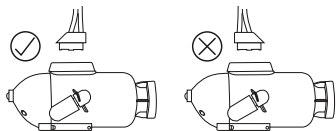

### 2. Betriebsbereitschaft herstellen

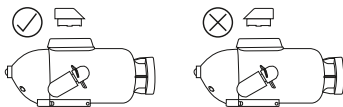

Tauchtiefe: 1 m

Reichweite der Fernsteuerung: ca. 3 - 5 m

## Warn- und Sicherheitshinweise – bitte aufbewahren

- ▶ Propeller stellen eine ständige Verletzungsgefahr dar. Vermeiden Sie unter allen Umständen eine Berührung solcher Teile.
- ▶ Bitte verwenden Sie keine unterschiedlichen Batteriearten und mischen Sie nicht neue und alte Batterien.
- ▶ Bitte verwenden Sie nur den empfohlenen Batterie-Typ.
- ▶ Leere Batterien bitte aus dem Fahrzeug entfernen.
- ▶ Batterien bitte nicht in offenes Feuer werfen - Explosionsgefahr!
- ▶ Bitte keinen Kurzschluss verursachen.
- ▶ Bitte beim Einlegen der Batterien auf richtige Polarität achten.
- ▶ Bitte Batterien aus dem Produkt entfernen, wenn das Produkt für längere Zeit nicht genutzt wird.
- ▶ Packung aufbewahren! Enthält wichtige Informationen.
- ▶ Niemals Batterien aufladen, die dafür nicht bestimmt sind.
- ▶ Akkus nur unter Aufsicht von Erwachsenen laden.
- ▶ Batterien entfernen, wenn der Artikel über einen längeren Zeitraum nicht benutzt wird.

**ACHTUNG!** Nicht für Kinder unter 3 Jahren geeignet, da Kleinteile verschluckt werden können. Erstickungsgefahr!

 




**invento**  
just play

### Declaration of Conformity

Herewith Invento Products & Services GmbH declares that this model (Art.No. 500810 = 777-219) including remote control meets the basic requirements and any other relevant requirements of guideline 2014/53/EU. The original declaration of conformity can be requested on [www.inventodownload.com/conformity](http://www.inventodownload.com/conformity)

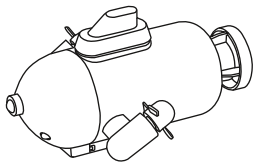


## Instruction Manual

Please read the operating instructions carefully before using.  
Please keep operating instructions in a safe place.

## Contents



 Submarine  
1x



Transmitter  
1x



Charging cable  
1x





Operating  
instructions  
1x





Antenna  
1x

## Part Details
  
### Submarine

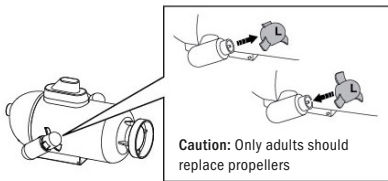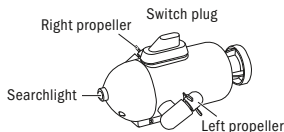


### Transmitter

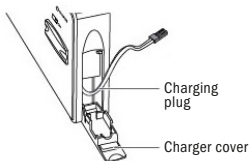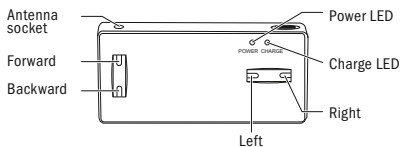  


## Preparation


1. Push the LOCK towards the direction shown to release the transmitter (fig. 1)

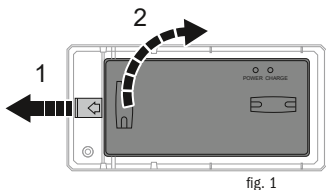


2. Remove the cover and take out the antenna (fig. 2)

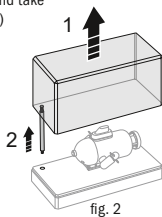


3. Remove the screw on the submarine base as illustrated (fig. 3)

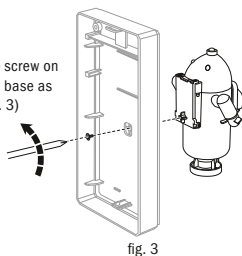


4. Turn the four retaining screws anticlockwise (fig. 4)

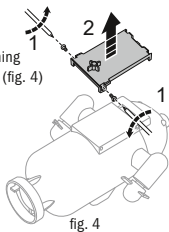


5. Insert and tighten the antenna to the antenna hole on the transmitter as illustrated (fig. 5)

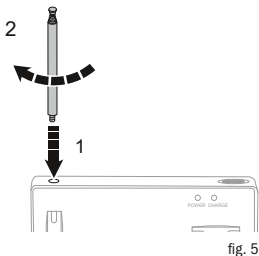



6. Use a Phillips screwdriver to open the battery compartment cover. Insert 4 x AA batteries with the correct polarity and replace the battery compartment cover (fig. 6)

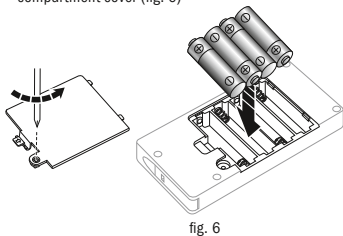


7. Press one of the buttons. The power LED lights up (fig. 7)

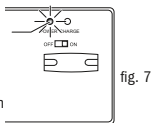

8. Open the charger cover on the transmitter and take out the charging cable. Insert the charging plug into the charging socket of the submarine (fig. 8). The charging LED lights up to indicate the charging is in process (fig. 9). The charging LED will extinguish after the submarine has been completely charged (charging lasts approximately 40 minutes). Operating time: approx. 5 minutes.

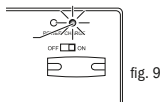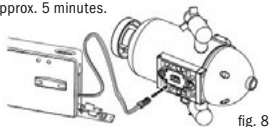


9. Charging by USB cable: Insert the USB plug into the USB port on your computer and the charging plug into the charging socket on the submarine (fig. 10). The charging LED lights up to indicate the charging is in process. The charging LED will extinguish after the submarine has been completely charged (charging lasts approximately 40 minutes). Operating time: approx. 5 minutes.

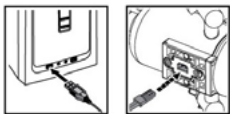

10. Place submarine into the water and press any button on the transmitter: Connection is established, if the submarine moves.


11. Charge submarine, if the seachlight LED is flashing (fig. 11)

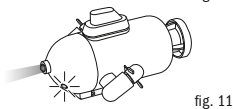


## Operation

Extend the transmitter's antenna for better signal reception.


1. Press forward button: The Submarine will dive forwards (fig. 12)

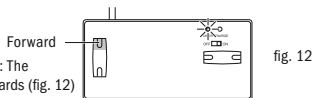





2. Press backward button: The Submarine will surface backwards (fig. 13)

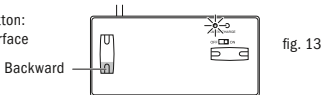

3. Press left button: The Submarine moves to the left (fig. 14)

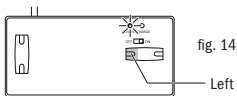

4. Press right button: The Submarine moves to the right (fig. 15)

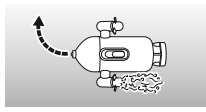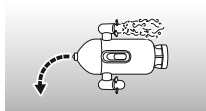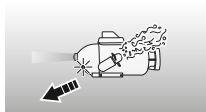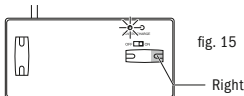

## Battery Safety Information

- ▶ Batteries not included (4 x AA batteries needed).
- ▶ Only batteries of the same equivalent type as recommended are to be used.
- ▶ Replacement of batteries must be done by adults.
- ▶ Please ensure that the polarity is correct when inserting new batteries.
- ▶ Remove empty batteries promptly.
- ▶ Please dispose used batteries as required by law – the disposal in household garbage is forbidden.
- ▶ Remove batteries if the remote controller is not to be used for an extended period of time.
- ▶ Non-rechargeable batteries are not to be re-charged.
- ▶ DO NOT mix old and new batteries or types of batteries (i.e. alkaline/standard).
- ▶ DO NOT short-circuit the batteries,
- ▶ DO NOT heat, dismantle or deform batteries – batteries may leak or explode.

## General Safety and Maintenance Instructions

- ▶ Errors and negligences in operating your models can result in serious injuries and damage to property. As manufacturers and vendors have no influence on the operation and maintenance of your models, we bring these hazards expressly to your attention but deny all further liability.
- ▶ In some countries it is legal requirement to carry a third party indemnity insurance. Please ask your local dealer or insurance company for further details.
- ▶ Keep away from children. Models contain small parts. Choking hazard.
- ▶ Moving parts are a constant source of injury. Never touch moving parts.
- ▶ Persons (including children) with reduced physical, sensory or mental capabilities or lack of experience are not allowed to use these models, unless they are supervised by a person responsible for their safety and able to give professional advice how the product should be used.
- ▶ Keep hands, hair, loose clothing and further objects away from propellers and moving parts.
- ▶ Never operate the boat in moving water – the model might drift off downstream.
- ▶ The submarine should only be operated in clean water (floating particles in the water could jam the mechanism and destroy the model). Always ensure good vision down to the bottom. We recommend shallow bathing pools, large aquariums or a bathtub. Make sure you can salvage the model without getting into the water.
- ▶ Max. operating depth is 100 cm.
- ▶ Never operate the submarine in salt water.
- ▶ Clean the model carefully after every run with clean water. Allow the submarine to dry out thoroughly after use.

## Recommended Accessories

4 x AA 1.5V batteries

**WARNING!** Not suitable for children under 3 years, because small parts could be swallowed. Choking hazard.